

Programming Chart PCS V 7.1 Wilma / Betty

<u>Keep button pressed for</u>	<u>LED</u>	<u>Release button</u>	<u>LED</u>		<u>Selected mode</u>	<u>Selected by</u>	<u>Exit programming</u>
5 seconds		SOS Function			LED flashes SOS or Alpine emergency Signal or Superflash		press button
10 seconds	red LED lights	Setup Dim-level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.		3 step with RVLr superflash mode 2 step 3 step stepless level	press button press button press button press button	automatically jump to low level jump to mid level automatically
		if 2 step dimming was selected					
		low dim level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.		dim level = Betty 1% / Wilma 2% dim level = 5% dim level = 40% dim level = 60%	press button press button press button press button	automatically automatically automatically automatically
		if 3 step dimming was selected					
		mid dim level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.		dim level = Betty 1% / Wilma 2% dim level = 5% dim level = 40% dim level = 60%	press button press button press button press button	automatically automatically automatically automatically
		low dim level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.		dim level = Betty 1% / Wilma 2% dim level = 5% dim level = 40% dim level = 60%	press button press button press button press button	automatically automatically automatically automatically
15 seconds	yellow LED lights	Setup capacity control	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec.		Low Middle High	press button press button press button	automatically automatically automatically
20 seconds	green LED lights	Setup Power	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec.		Econo = Betty 13 W / Wilma 10 W Normal = Betty 17 W / Wilma 12 W Power = Betty 22 W / Wilma 15 W	press button press button press button	automatically automatically automatically
25 seconds	blue LED lights	Setup SOS	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec.		SOS alpine emergency Superflash	press button press button press button	automatically automatically automatically
= factory defaults							