

EXUSTAR CLEATS SYSTEM FOR EXUSTAR & LOOK CLIP-IN PEDALS

PLEASE READ INSTRUCTIONS CAREFULLY.


Exustar recommends that the following procedures are performed by a professional bicycle dealer.

*CLEATS INSTALLATION

Using the supplied screws and washers, attach the cleats tightly to compatible shoes. The lateral center line of the cleat should be aligned under the center of the ball of the foot. Cleat position can be finely tuned according to preference.

There are two types of cleats:

- E-BLK10/11/12k(Black)-fixed cleats with very little lateral freedom before release.
- E-ARC10/11/12k(Red)-allow natural foot movement within an arc of 7°.
- E-BLK11 / E-ARC 11-These stiff, durable cleats have an outer slip-resistant, hard-wearing layer.

PEDALS		EXUSTAR	
CLEATS			
E-ARC10	E-BLK10		E-PR100 Serial
E-ARC11	E-BLK11		E-PR101 Serial
E-ARC12K	E-BLK12K		
Compatible with Look system			

MAINTENANCE:

- Replace cleats that are badly worn.
- Keep cleats and pedals clean for best performance.
- Always ensure cleats are tightly attached to cycling shoes before each ride.
- If you have any questions regarding the installation, use, shoe/pedal compatibility or maintenance of these cleats or Exustar pedals, talk to your Exustar dealer.

- E-ARC10
- E-ARC11
- E-ARC12K



- E-BLK10
- E-BLK11
- E-BLK12K

Exustar Enterprise Co., Ltd. Specifications are subject to change without notice. Check us out on the web at www.exustar.com Copyright Exustar Enterprise Co.,Ltd.

2006-05 EXUSTAR Part no. EPB096

EXUSTAR® CLEATS SYSTEM REPLACEMENT CLEATS



Exustar Pedaling System

CLEATS-ONE SET OF CLEATS & HARDWARE

REPLACEMENT CLEATS FOR EXUSTAR & LOOK PEDALS