

# Introductions

### **1) Caution, magnets!**

The bag has magnets sewn into the flaps. Please avoid direct contact between credit cards, electronic storage media, pacemakers and electronic devices with the magnets in the flap.

### **2) Cleaning**


Clean your bag by hand with a mild detergent. We advise you to re-impregnate the bags after they have dried, using a suitable spray.

### **3) Two-way strap changeover**

To use the two-way function of the strap, you may have to change the strap over depending on how you usually carry the bag. In the standard version, the strap is fitted for carrying the bag on the right side of the body. If you normally carry your bag on the left, please change the strap over as follows:


α) Starting position

Place the bag down in front of you as shown here. If the **bottom clasp (A)** is on the right side of the bag as illustrated, then the bag is assembled to be carried on the right.

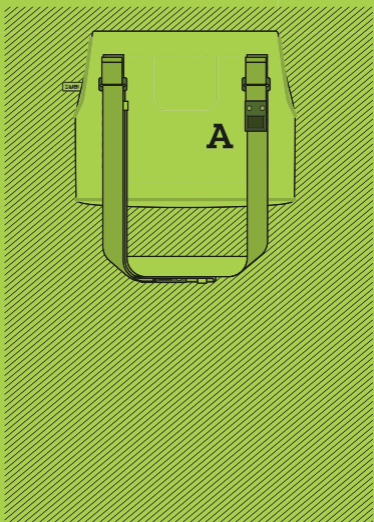


b) Changing the clasp position

Open the two Velcro fasteners, take the strap off and fit the **bottom clasp (A)** to the left Velcro fastener.

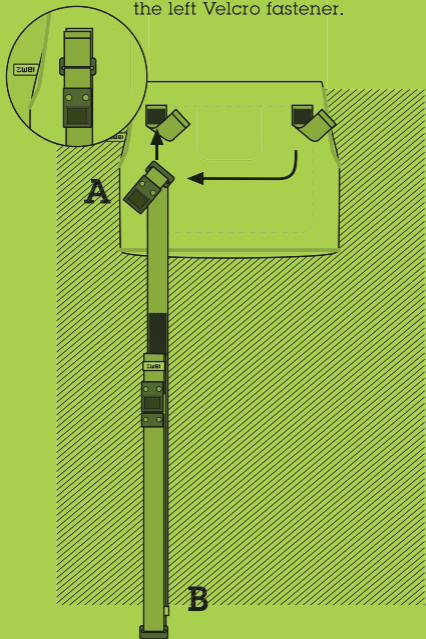

c) Fitting the strap

Take the **open end (B)** up to the fastener without twisting it and fasten the strap here. The strap padding must then point towards the bag as shown here.

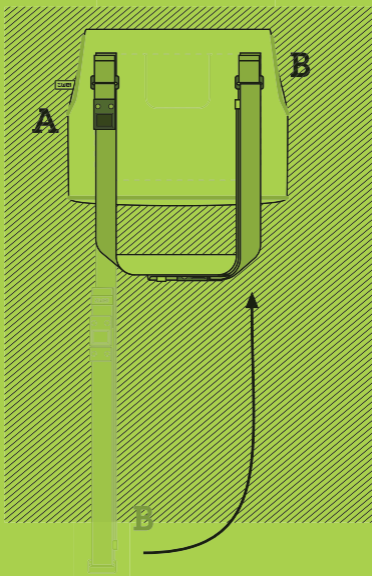


#### 4) **Two-way strap function**

You can use the two-way strap to fasten your bag also with the **tummy belt** to prevent it from slipping.

α)

Open the **upper clasp (C)** and thus release the **tummy belt (D)** from the **shoulder belt (E)**.

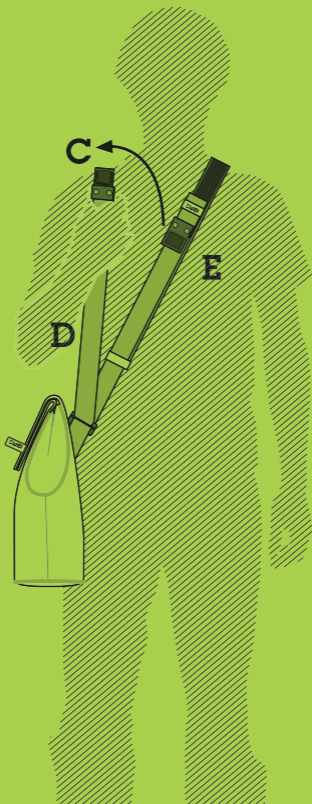


b)

Push the bag backwards; using your other hand, pull the **lower clasp (A)** to the front, lifting the bag slightly with both straps while doing so.

**C**




**D**

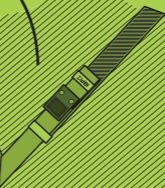

**A**




EMBI

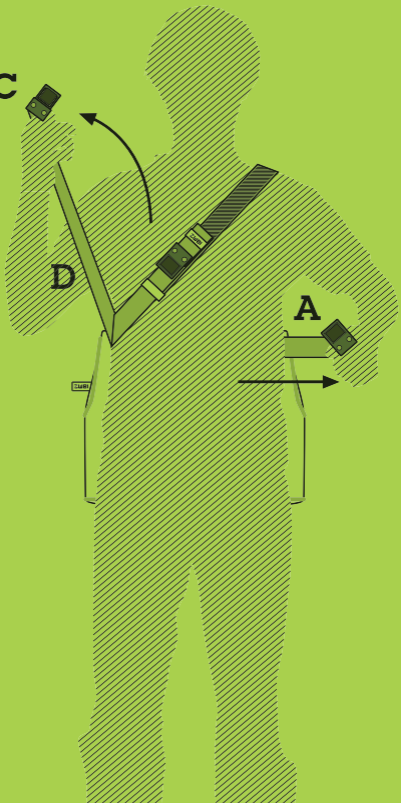

c)

Slot the tummy belt into the **lower clasp (A)**.

If you would rather wear the **tummy belt (D)** around your hips, adjust the strap length of the **shoulder strap (E)** to suit your needs.

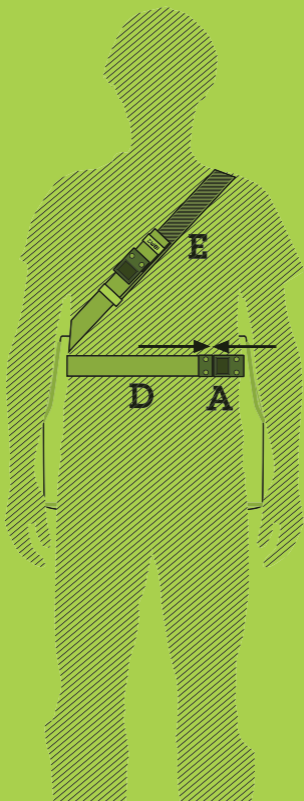

5) **Two-way strap**  
**Adjusting the length**

To adjust the strap length, pull the **adjusting fastener (F)** off the strap and then fix it again in the right position to suit your needs.





**F**

CARRI

CARRI




## 6) Using the **KLICKfix** function

zwei bags are available with or without the **KLICKfix** function. This allows for the bags to be fastened to a **KLICKfix** adapter at the front on the handlebars or on the seat tube of your bike. The adapter is available from well stocked bicycle dealers and is not included in the scope of supply. The total weight of the bag must not exceed 5kg.



a)

Open the **KLICKfix** cover on the back of the bag.

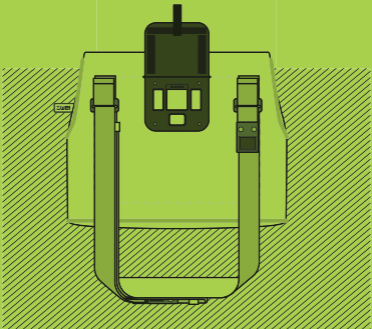


b)

Fold the strap and put it in the rubber loop fastened to the flap.

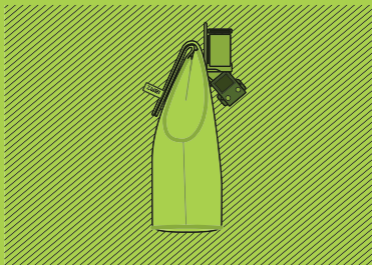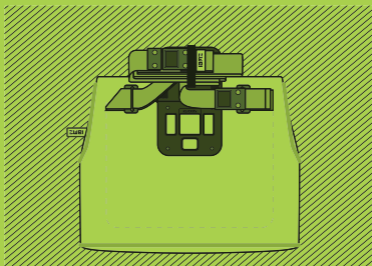

c)

Hang your bag into the adapter from above and press it down until it clicks into the adapter.

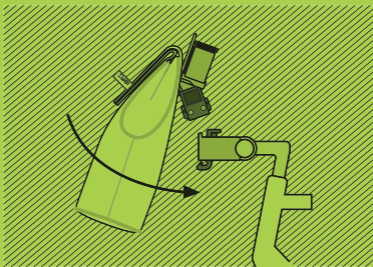

**zwei**