





**Rahmenmontagebügel** (nur für Räder mit Gewindegewinde M6 am Steuerrohr). Bügel mit 2 Schrauben M6 X 14 auf Gewindegewinde montieren.



Dabei Schraubenlänge und Gewindetiefe beachten, das Rahmenrohr darf nicht beschädigt werden.

Lenkeradapter oder Festkorbbalger aufschieben und mit 4 Kreuzschlitzschrauben befestigen **Wichtig:** Vor jeder Fahrt festen Sitz prüfen. Beim Radtransport auf dem Autodach das Zubehör unbedingt abnehmen.

**Frame bracket** (only for bikes with integrated threads on head tube). Mount bracket with 2 screws M6 X 14. Make sure that screw length will not damage the head tube. Put the adapter on the bracket and fix it with 4 cross-head screws. **Important:** Check secure mounting of the accessory before each ride. If you transport the bike on a car-rack, do not leave the accessory on your bike.

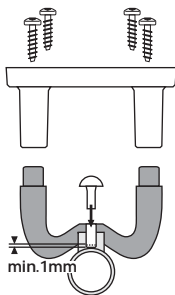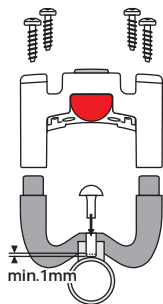

REGISTERED DESIGN. PAT. PEND. MADE IN GERMANY 07/07 R&K KR 300

# RAHMEN MONTAGE

für Lenkeradapter u. Festkorbbalger  
Mounting bracket for  
handlebaradapter and fix basket



RIXEN  KAUL

<sup>®</sup>  
**KLICKfix**

[www.klickfix.com](http://www.klickfix.com)